

ZPN 722660

Fix magnet in front brake disc bracket.

Mount sensorholder to fork leg and attach cable to leg with tie-raps.

Fix speed-sensor in holder with hex bolt

Remember the distance between sensor and magnet needs to be 0.8 mm, NOT MORE. Increased distance may lead to malfunction.

INSTALLATION SET UP

- 1) Turn on power with ignition key
 - 2) Press the set buttons simultaneously on the back of speedo housing. Switch the ignition on and off TWICE whilst holding the 2 buttons.
 - 3) Check that in the trip meter the current setting is blinking on and off.
 - 4) 0-1-2-3-4-5-6-7-8-9-A-B-C-D-E-F
SLOWER-----HIGHER
Choose 1 as a rough setting to start from
 - 5) To set correct value press the 'SET' button (1)
 - 6) To save the selected value, press 'MODE' (2)
 - 7) Your choice will be highlighted by blinking
 - 8) To save your selected setting, turn the ignition **off and on** again.
-
- 9) After speed settings switch ignition off and on again to get to standard-mode.
 - 10) The setting "1-65" is for motorcycles with 120/70-17 front wheel
 - 11) Setting "1-52" is for 12-size wheels (go-karts, quads, wheelbarrer)
 - 12) To RESET trip meter push SET (1) button