



ZPN 302231 / 302233

Kick starter kits

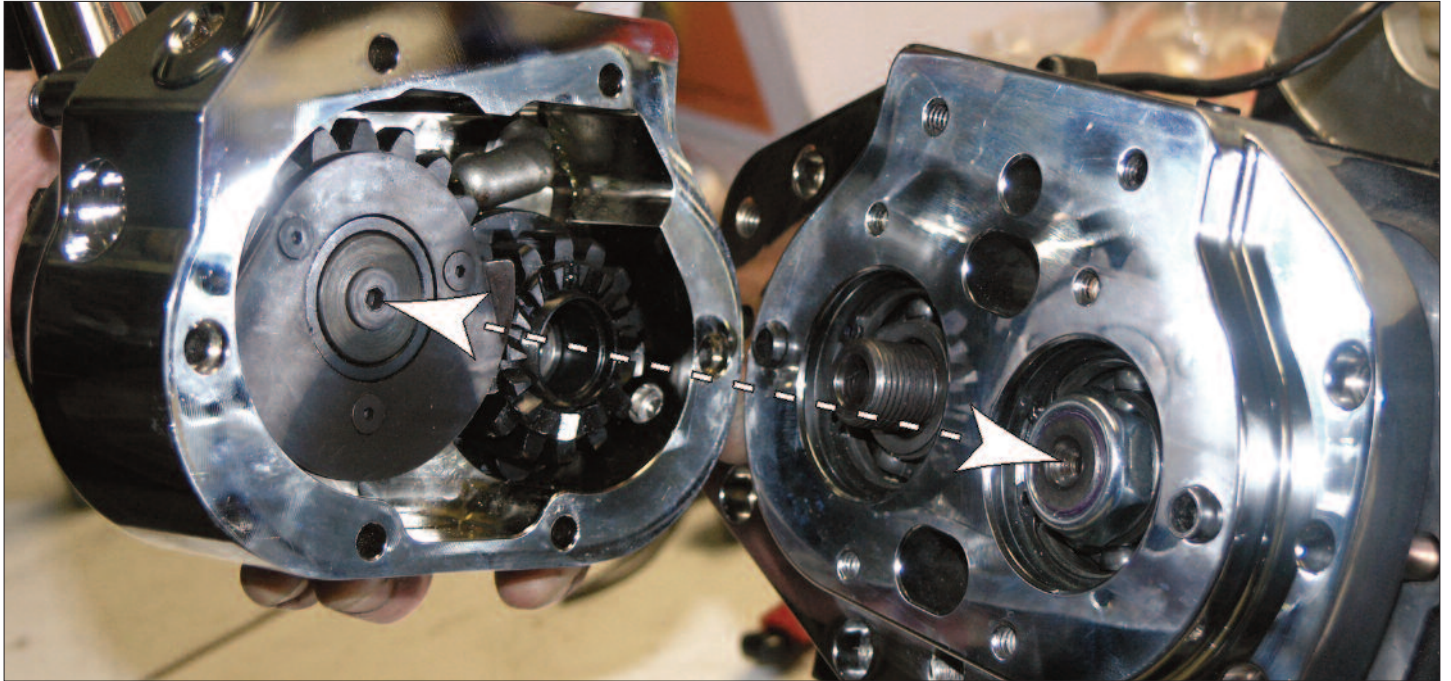

Check for proper clearance between counter shaft and counter sunk allen bolt.

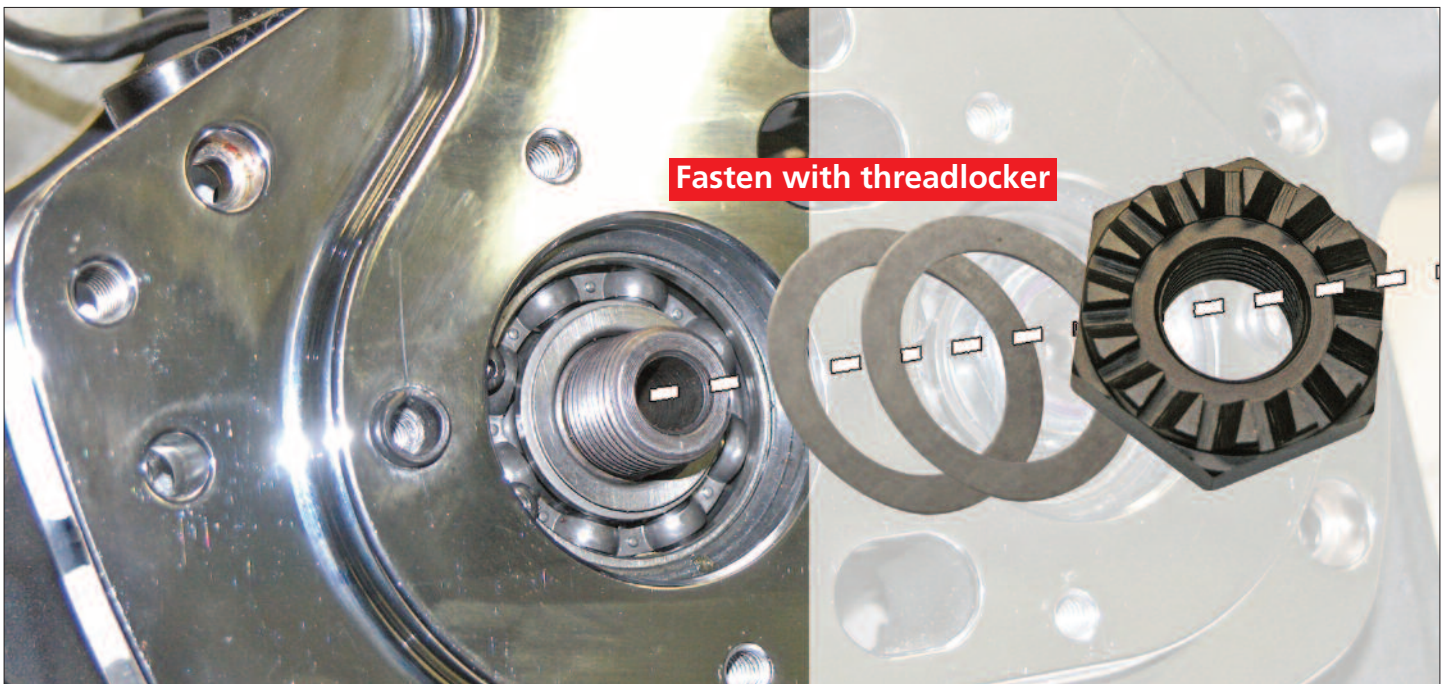

If necessary, add shim(s) for proper engaging and returning of ratchet gears. Make sure ratchet gears have enough clearance so they do not touch when not engaged.



ZPN 302231 / 302233

Kick starter kits

